



Nilfisk




128337176

Kornmarksvej 1|DK-2605 Broendby|Denmark|Tel.: (+45) 4323 8100




Quick Start Guide - Excellent 160

 Caution: Read the instructions before using the machine



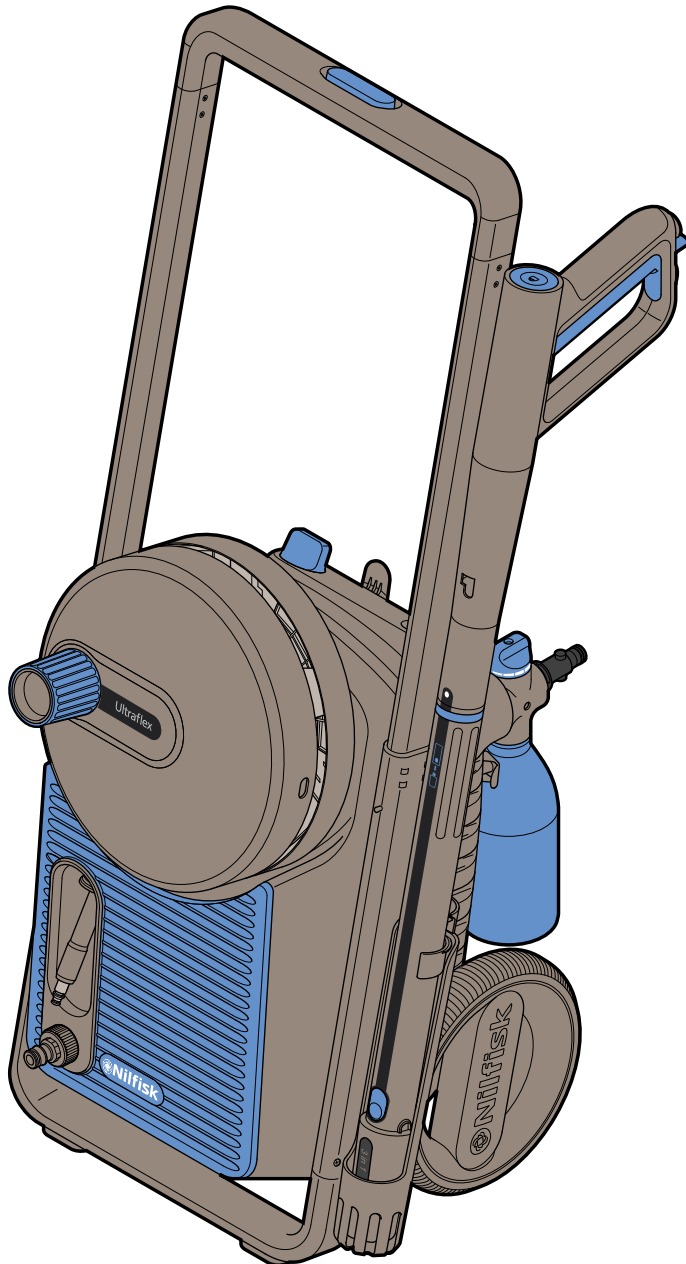


Excellent 160

   A

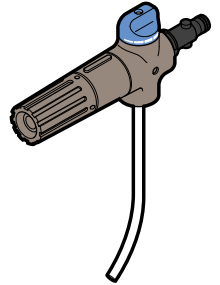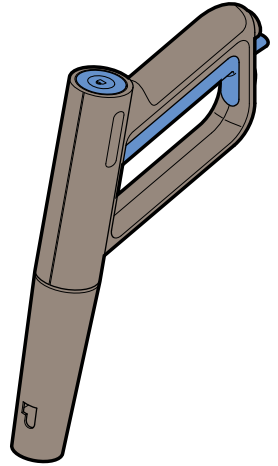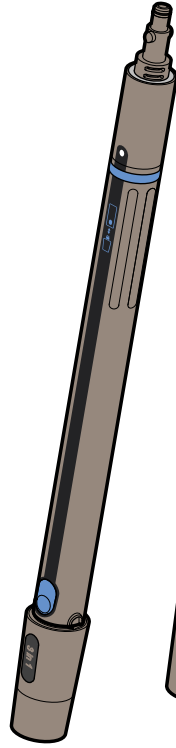

x2

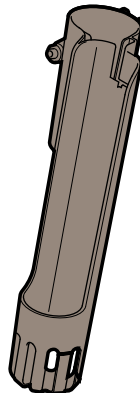   


Excellent 160


A



 
1

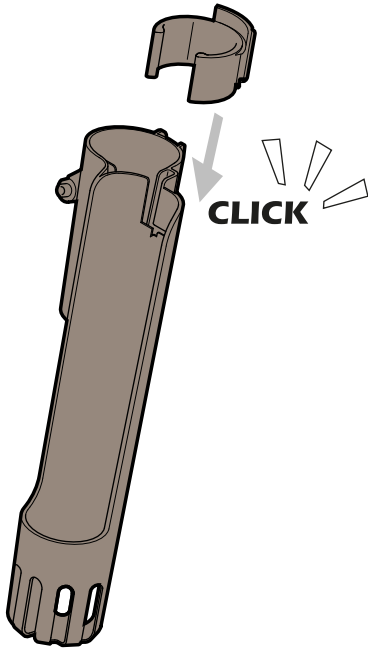


2

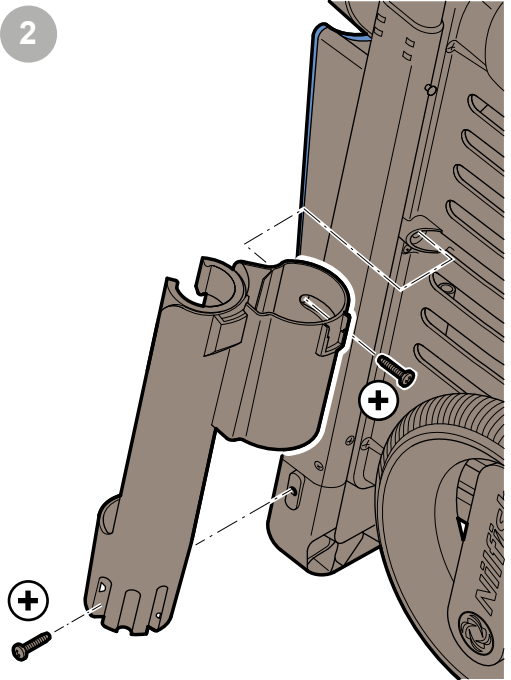 

3

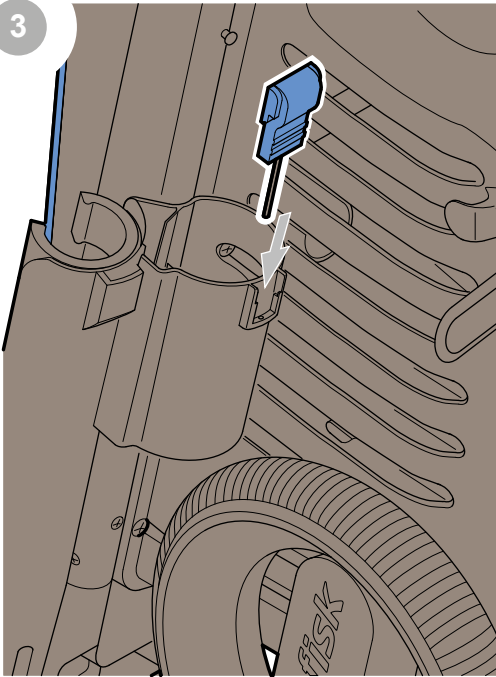 


4

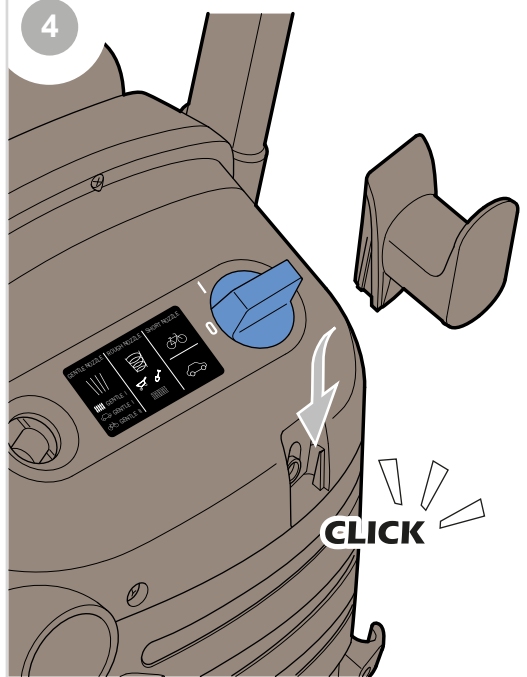 


A



 
5

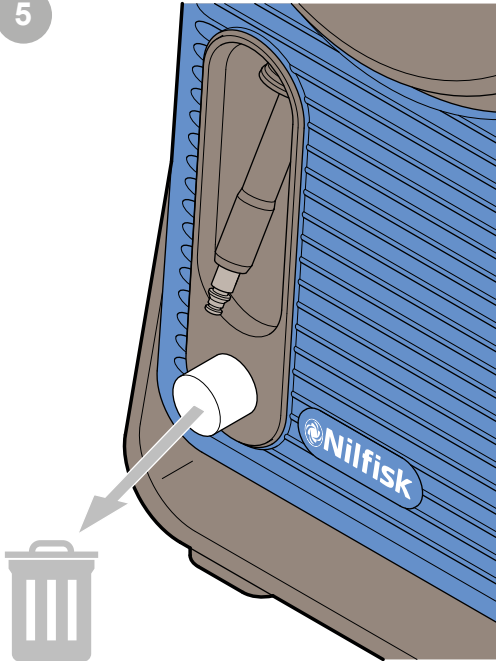


6

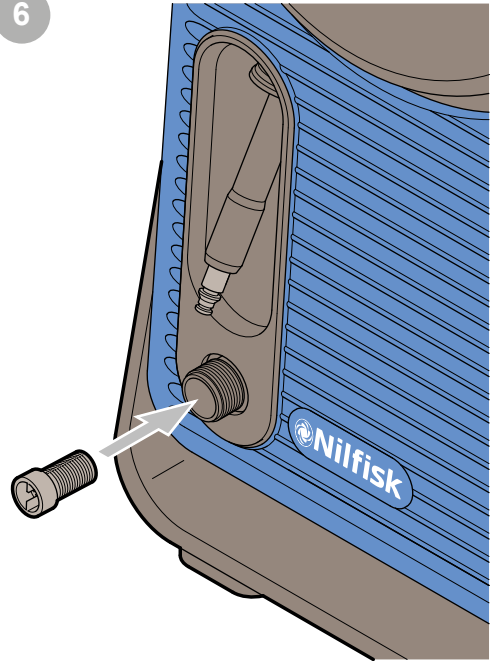 




7

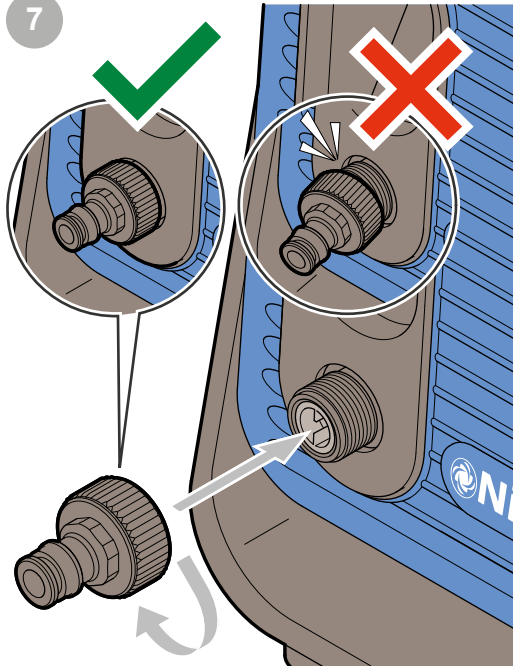 

8

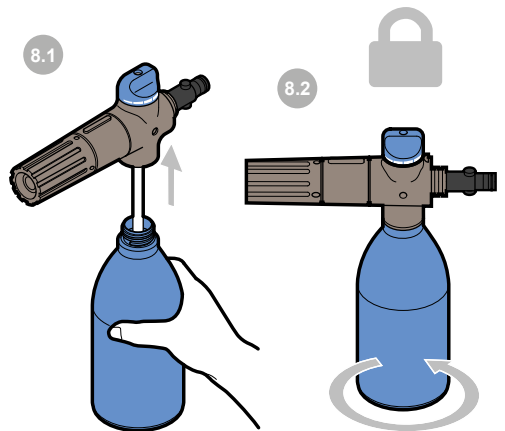 


A

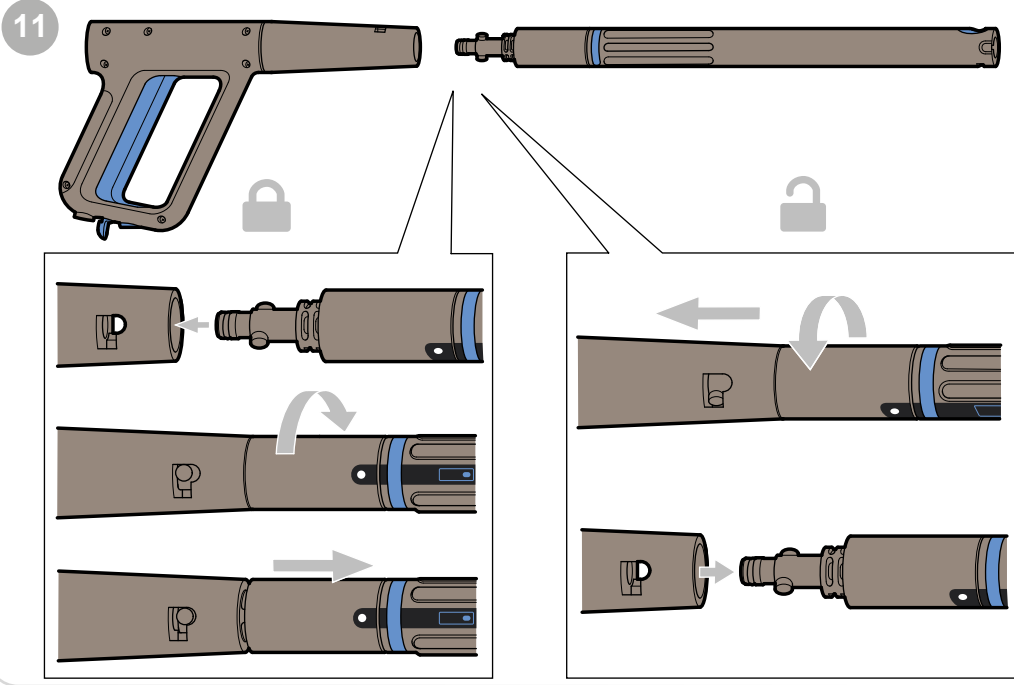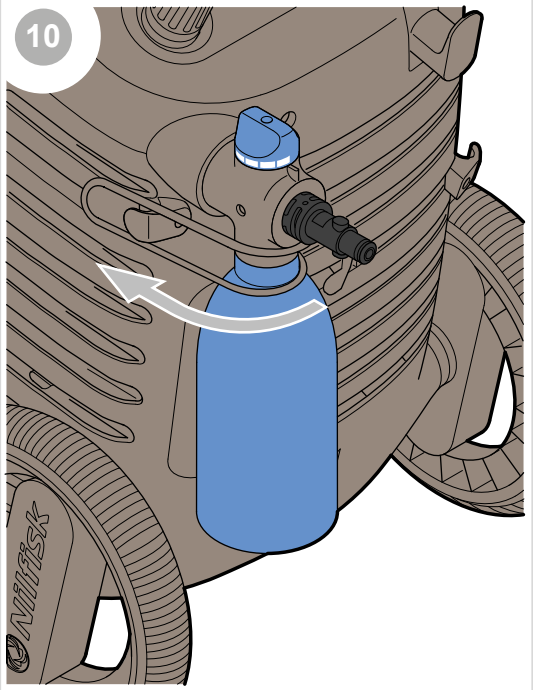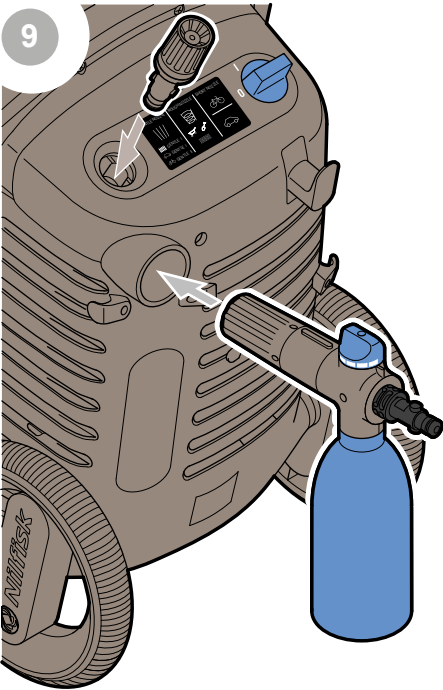   


A



 
12

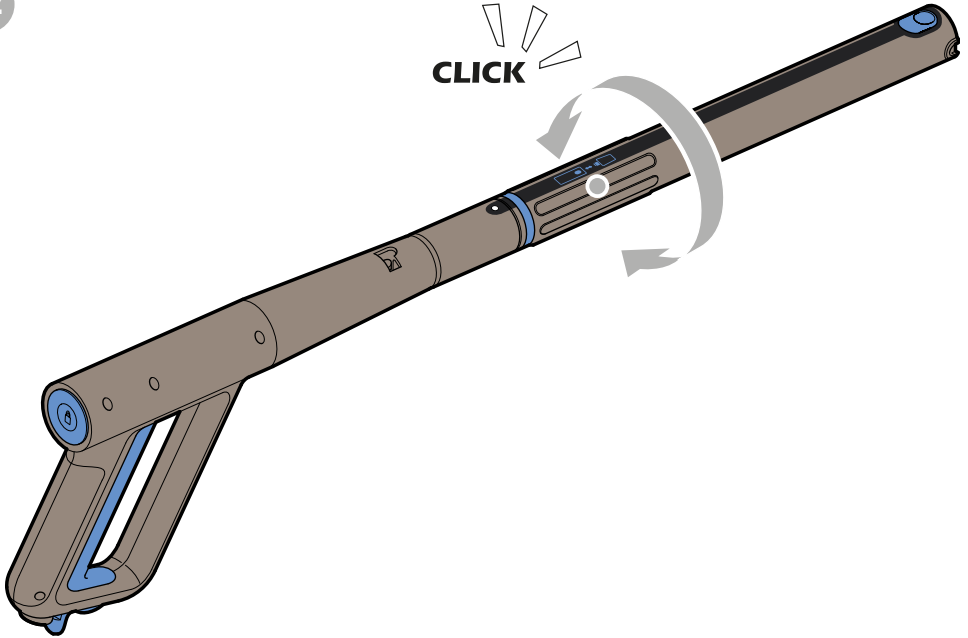

13

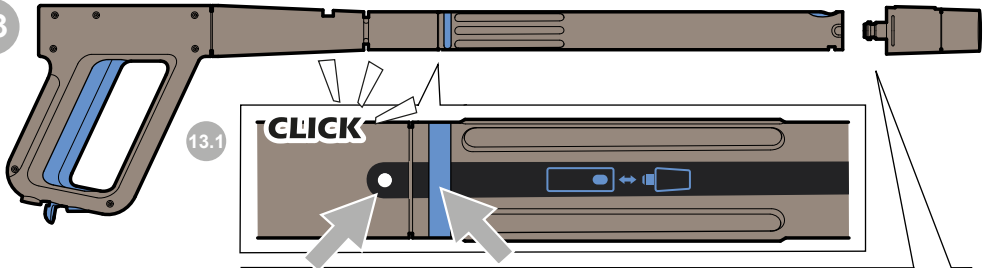 



 
13.2

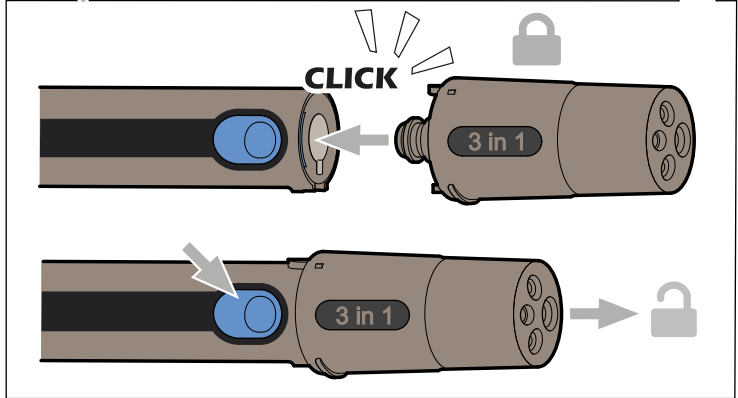


A



   
14

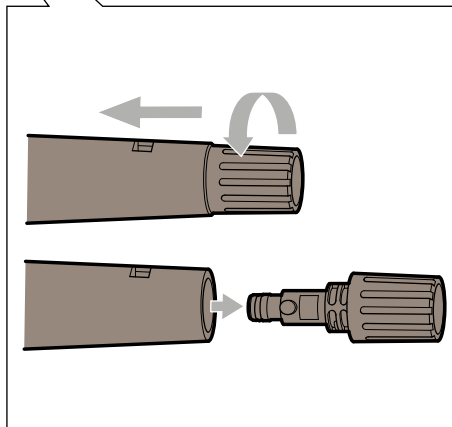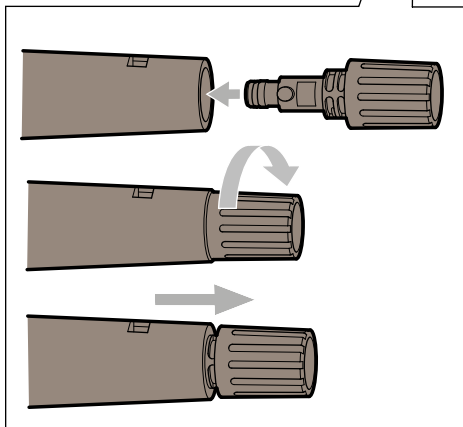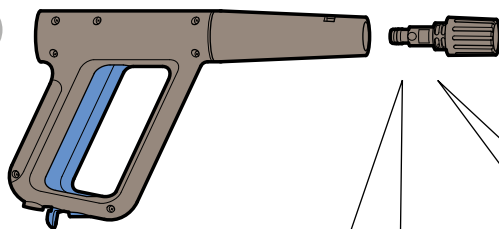

15

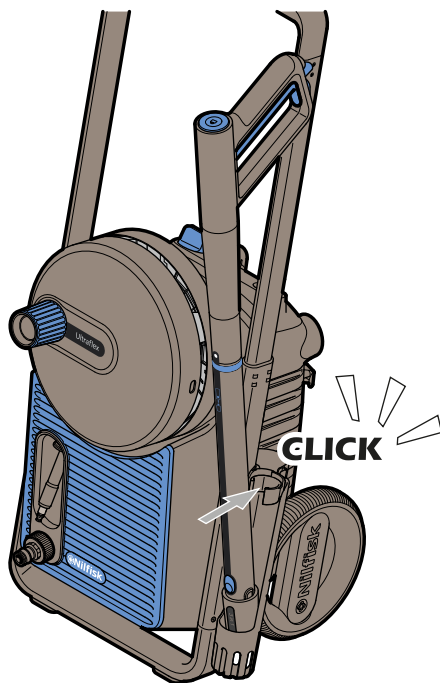 


16

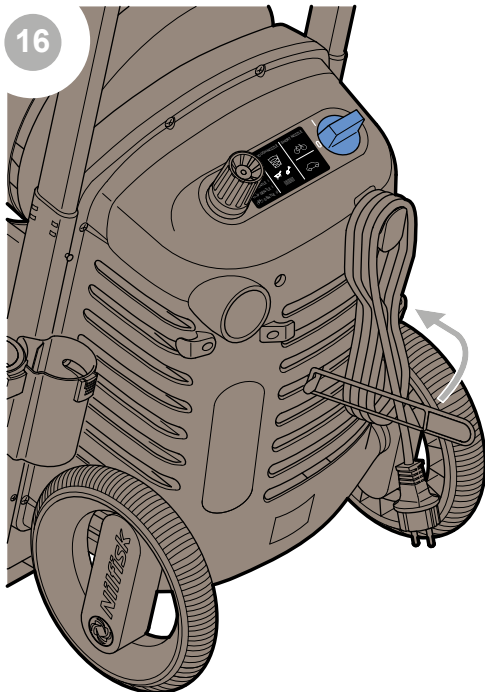 


B



 
1

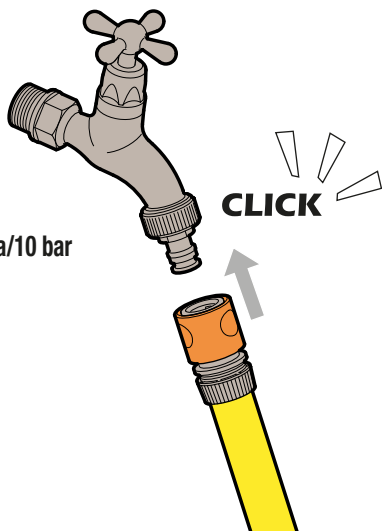


2

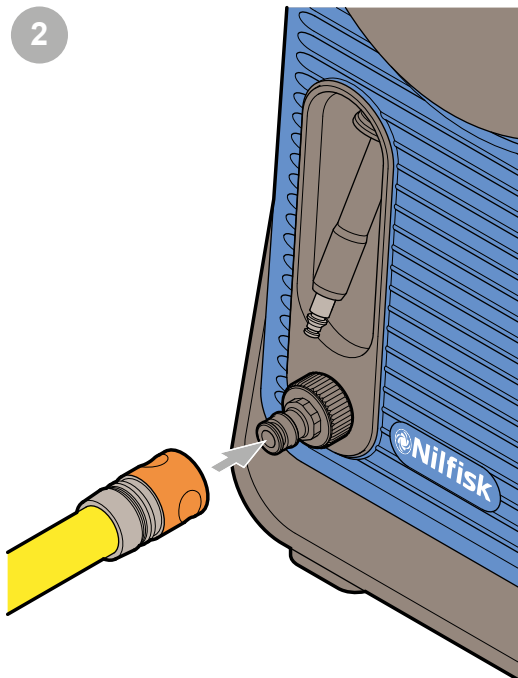 

3

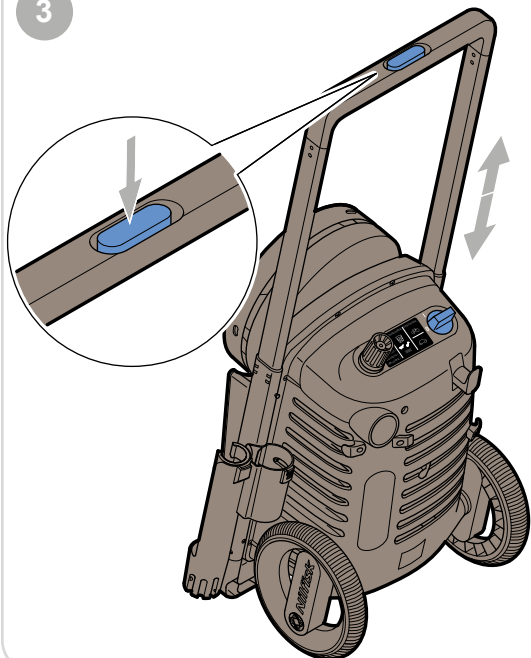 


4

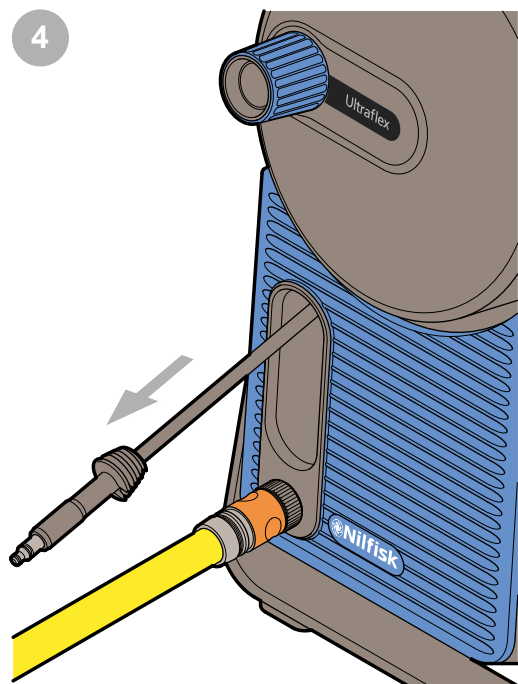 


B



 
5

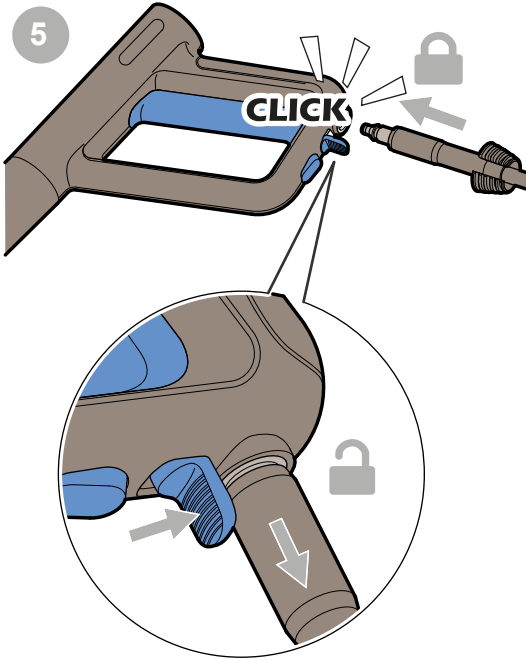


6

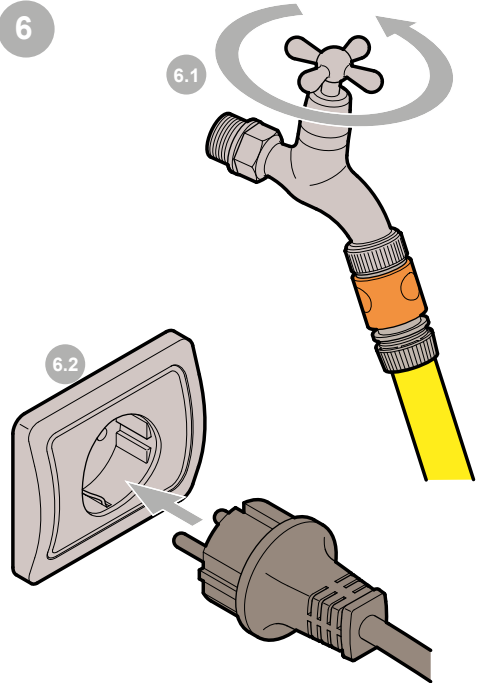 

7

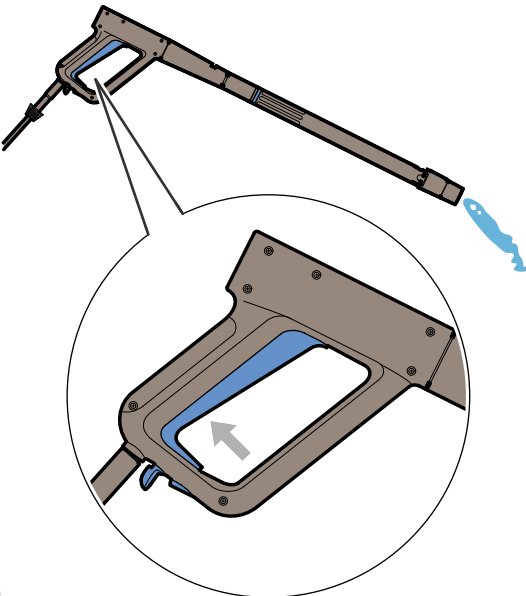 


8

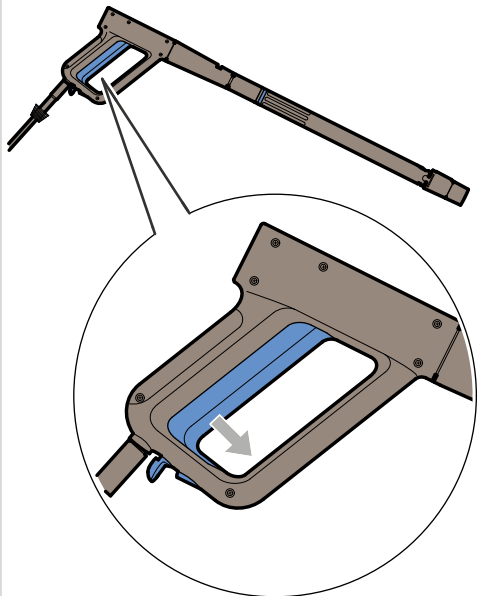 


B



 9

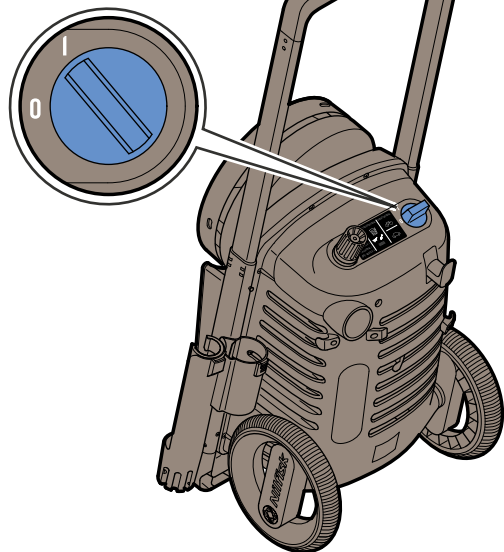


10

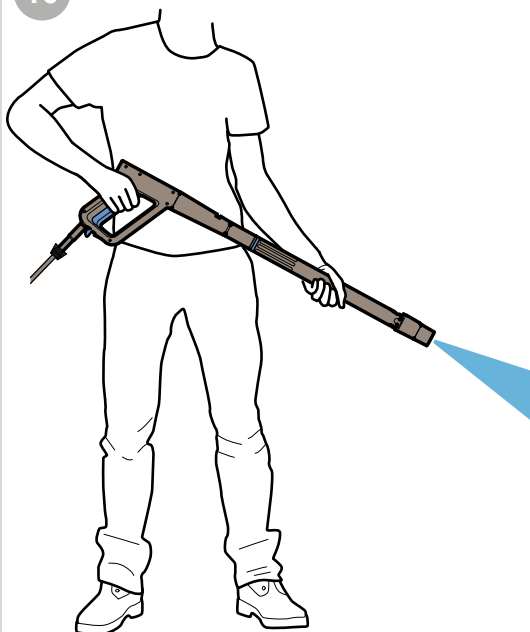 


11

 
11.1

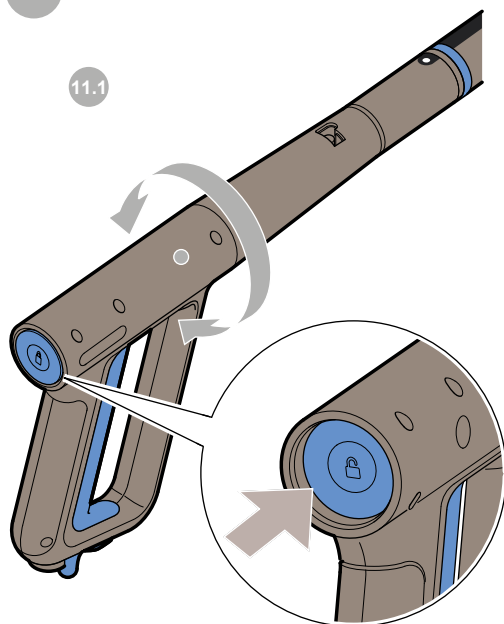

 11.2

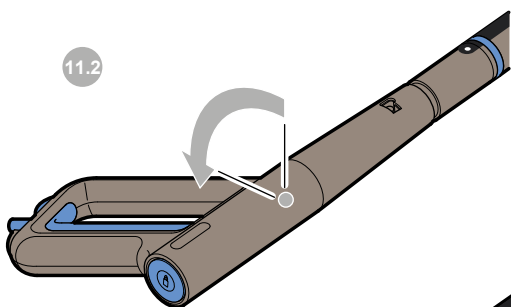

 11.3

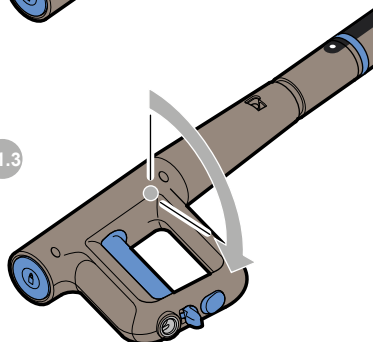


B




12




 
ROUGH NOZZLE

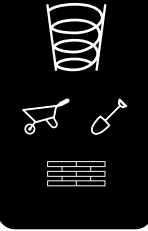

ROUGH

 


GENTLE 1

  

GENTLE 2

 
GENTLE NOZZLE

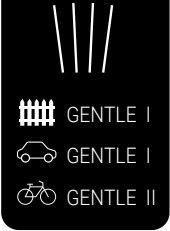

CLICK

CLICK

 13

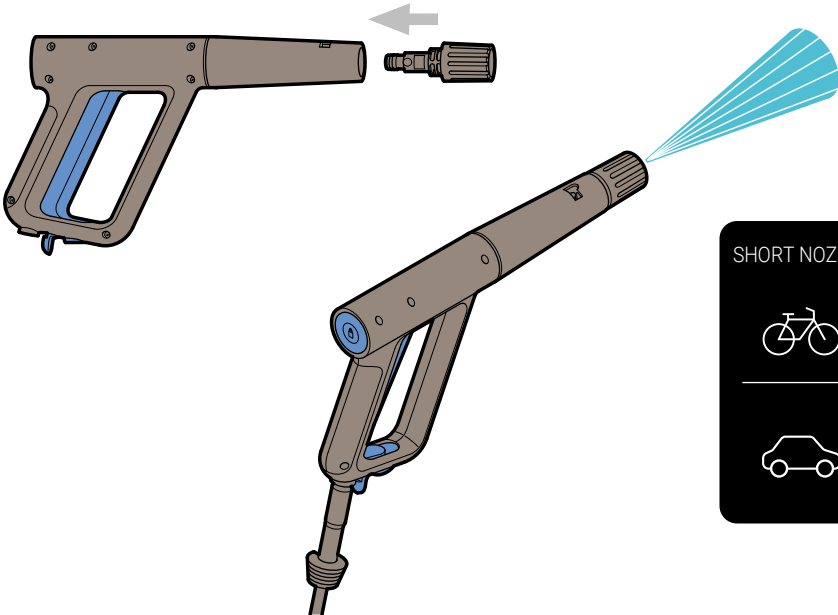

SHORT NOZZLE



B

 


14


14.1




14.2

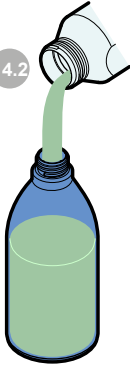

 
14.3

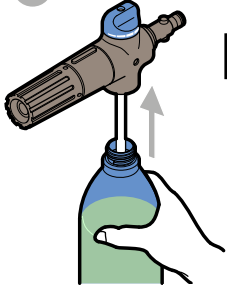

 
14.4

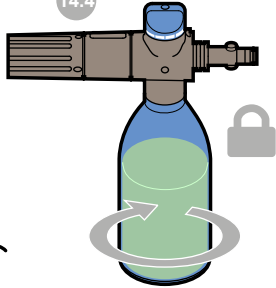


15

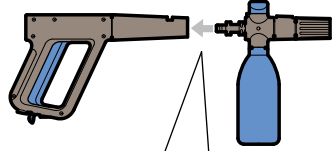 

 
15.1

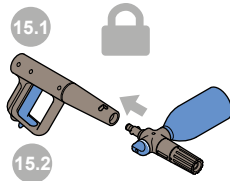

 
15.2

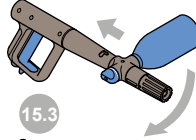

 
15.3

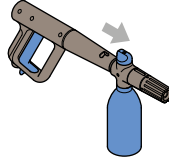

 15.4

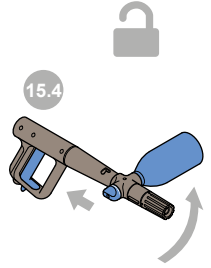

 15.5



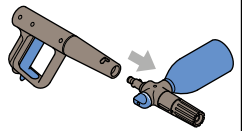


16


MIN



 
 
 
MAX

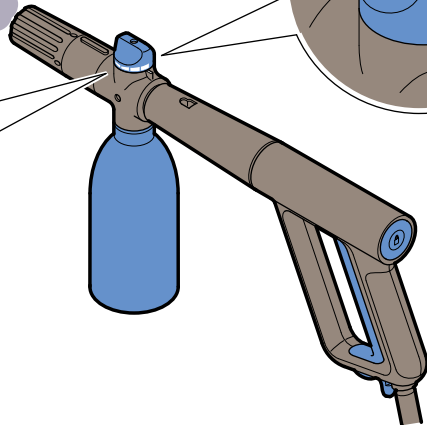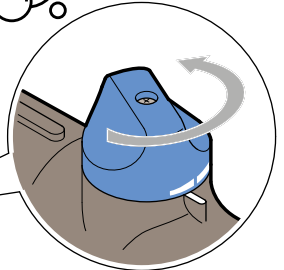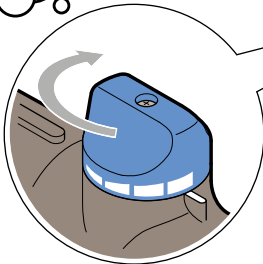


C

 


1

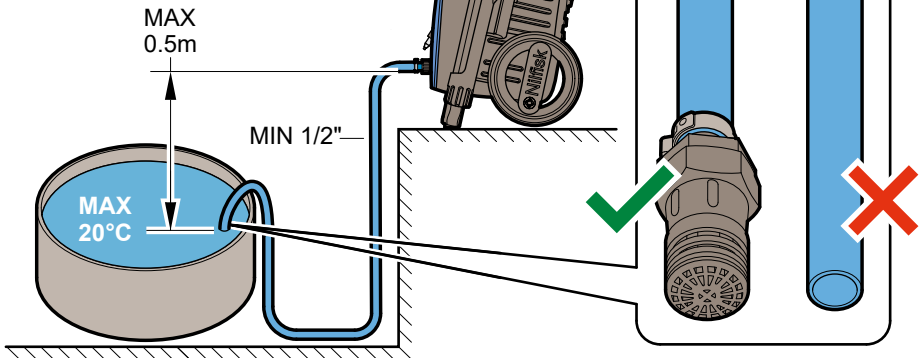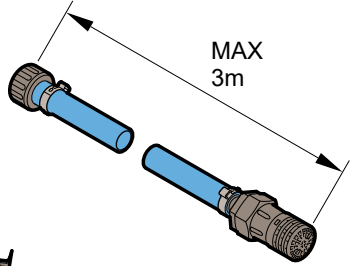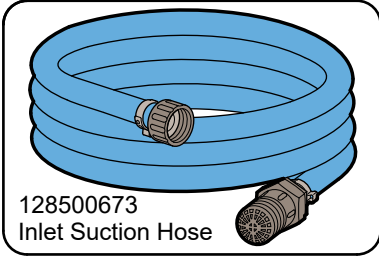   






2

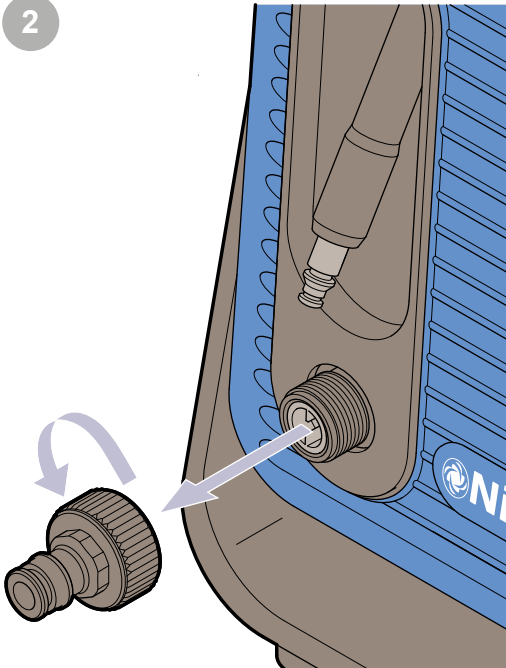 

3

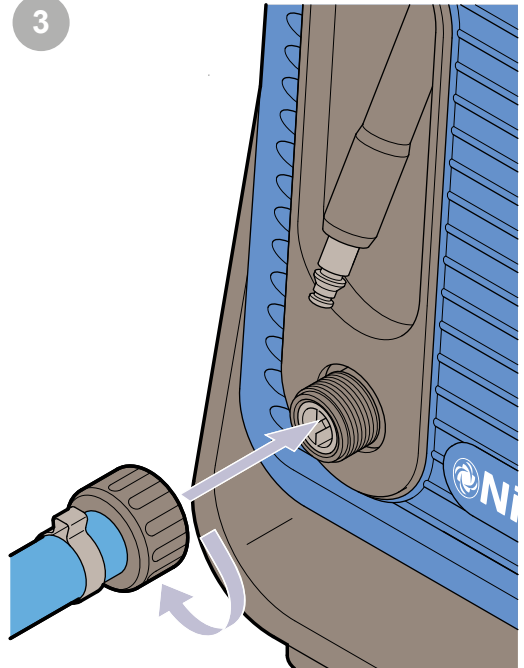 

C

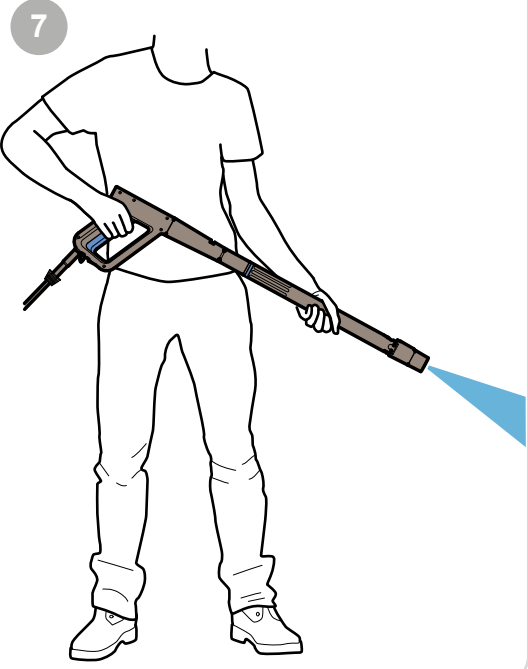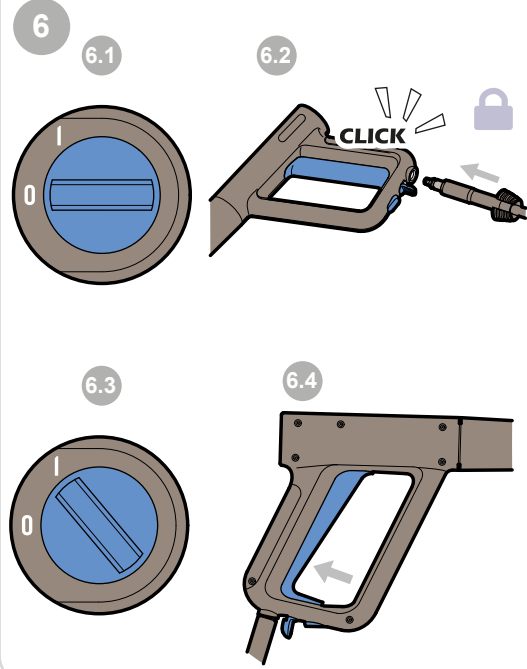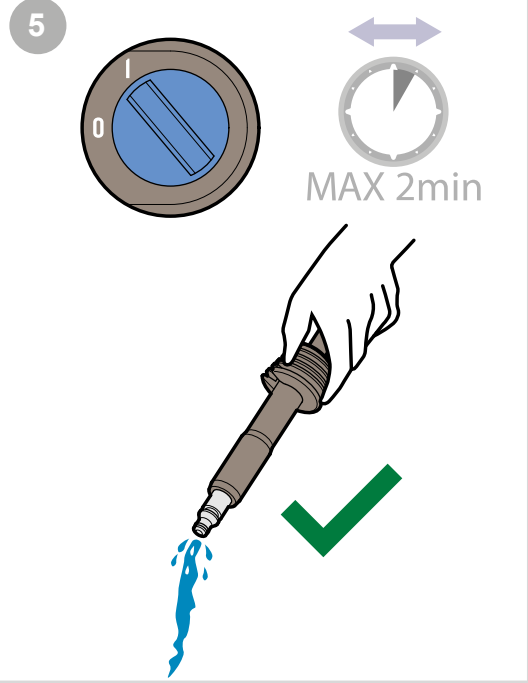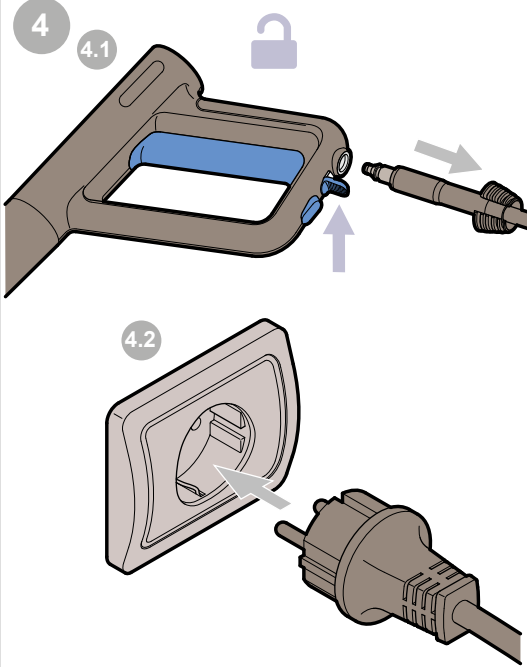     


D

⏸ >5min




 1

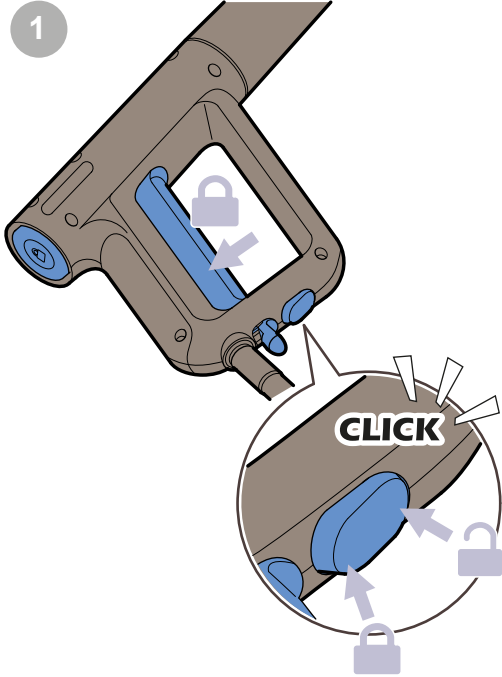


2

 
2.1

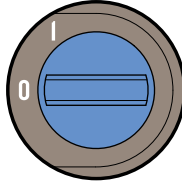

 2.2

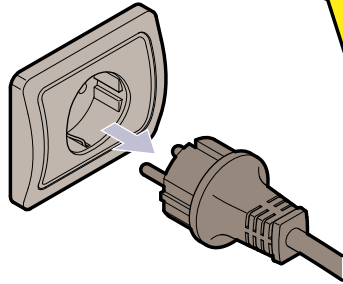

 2.3

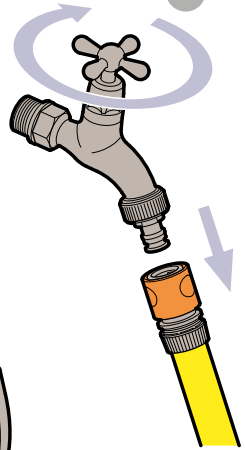

FR
Cet appareil
se recycle

À DÉPOSER
EN MAGASIN



OU

À DÉPOSER
EN DÉCHÈTERIE



 
Points de collecte sur www.quefairedemesdechets.fr
Privilégiez la réparation ou le don de votre appareil !

E




1

1.1

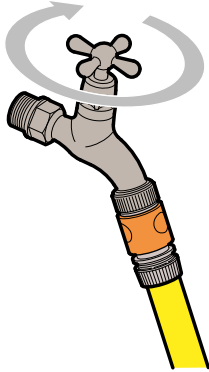


 1.2

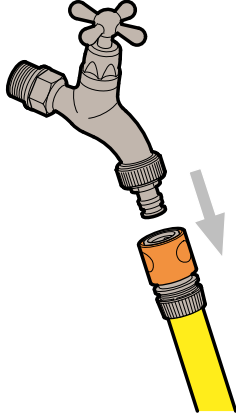

2

 
2.1

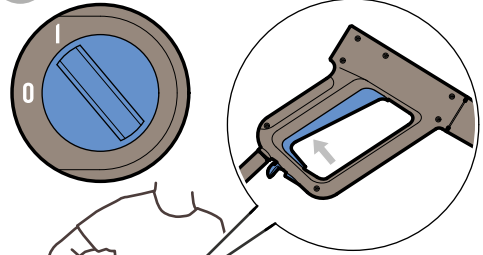

2.2



 
3

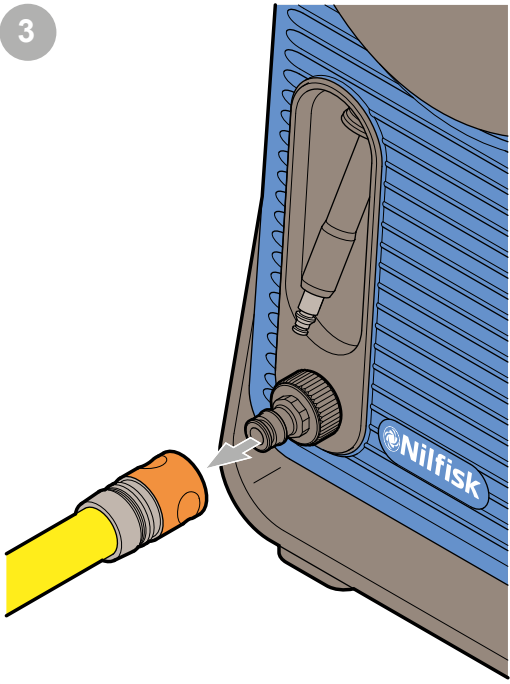


4



 
4.1

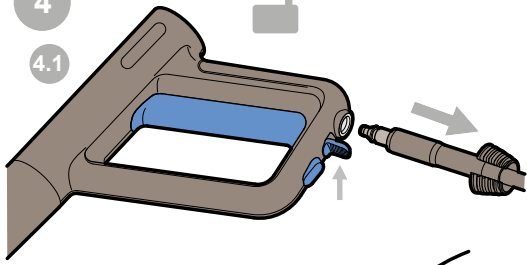

 4.2

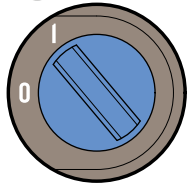

 
4.3

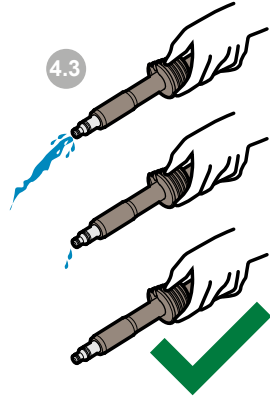




5

 
5.1

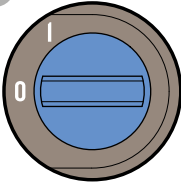

 5.2

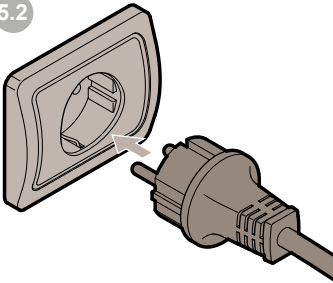


6

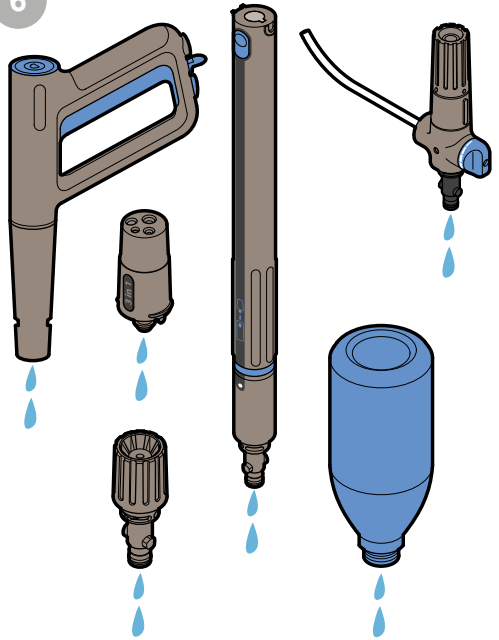 


7

 7.1

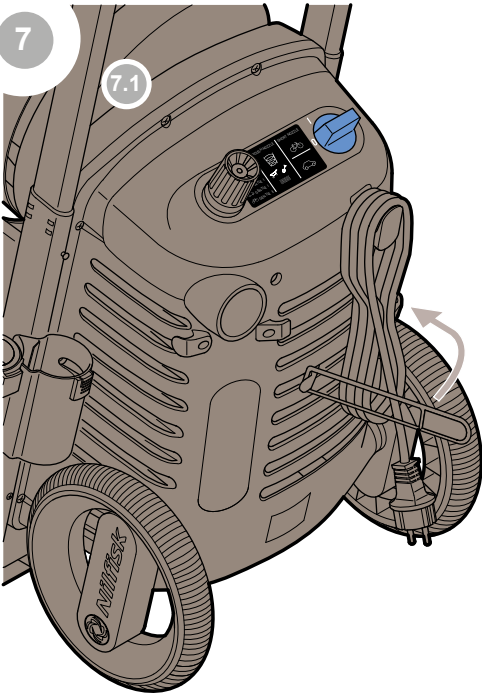

 
7.2

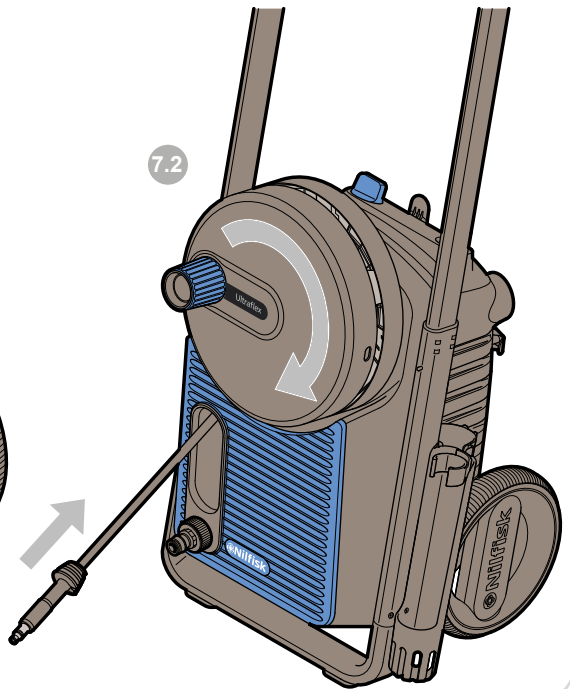


E



 
8

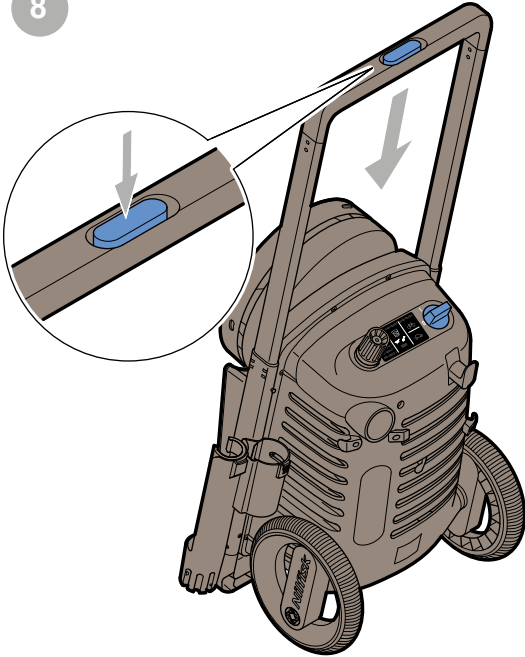


9

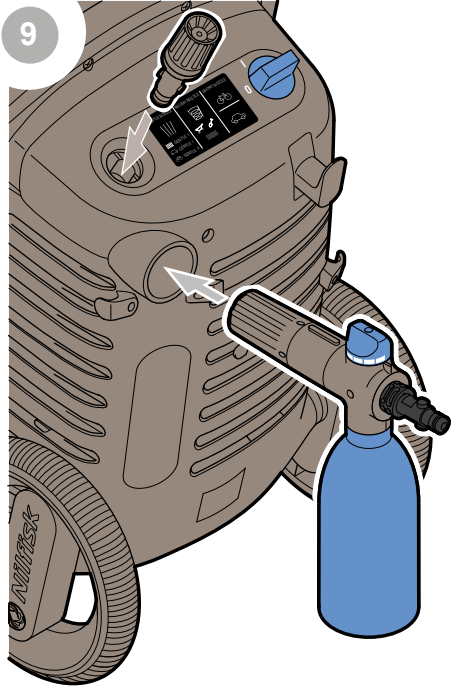 

10

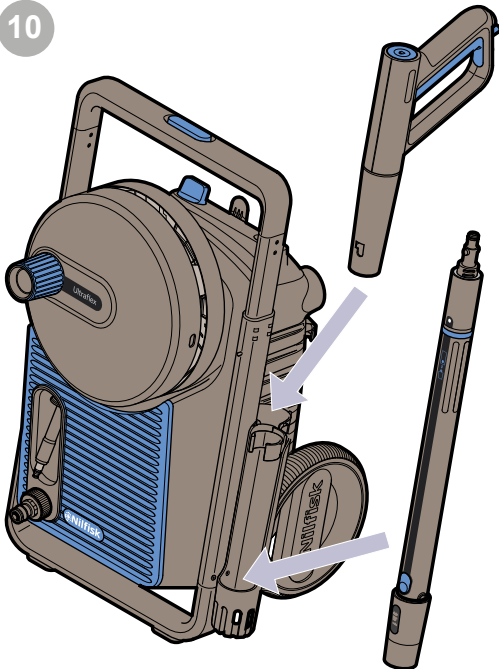 


11

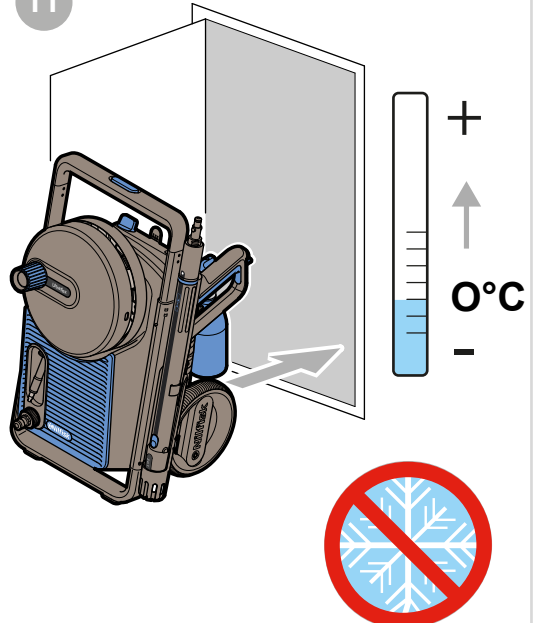 




1

 
1.1

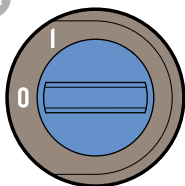

 1.2

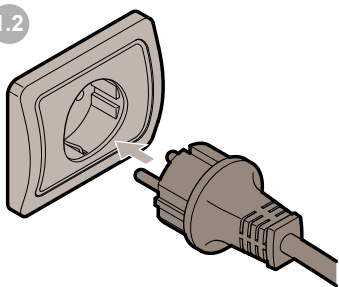


2

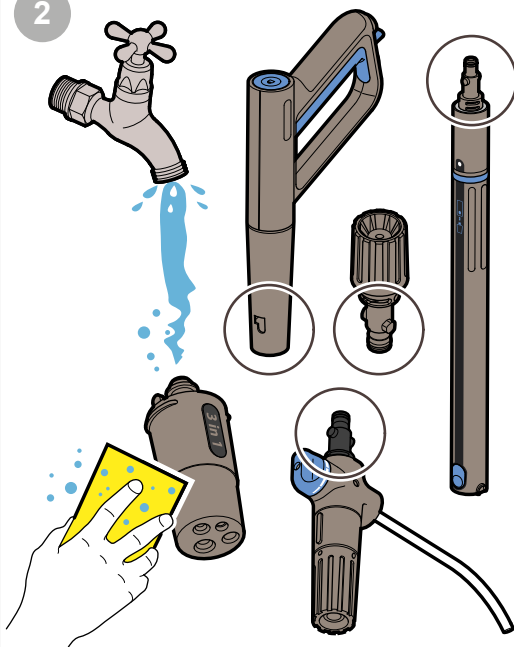 


3

 
3.1

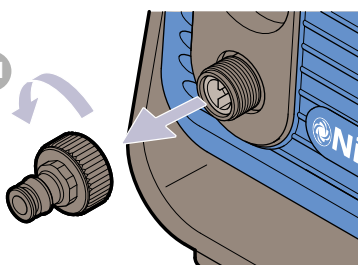

 3.2

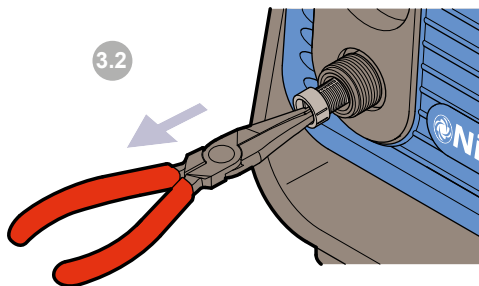


4

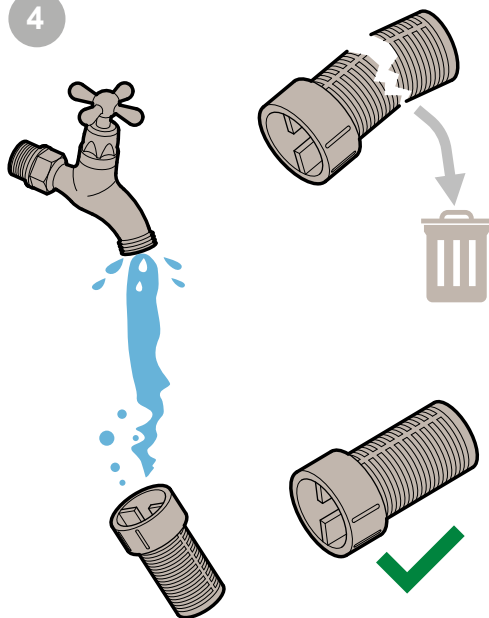 


F



 
5

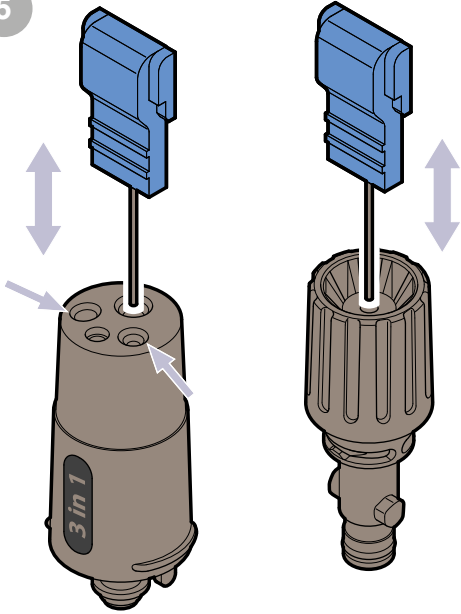

6

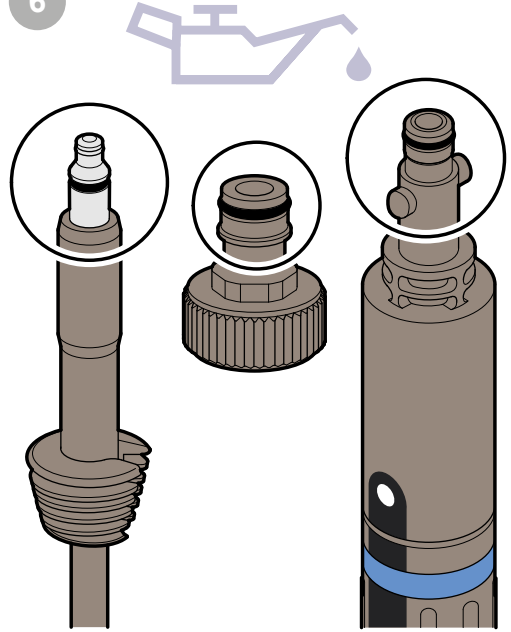 

7

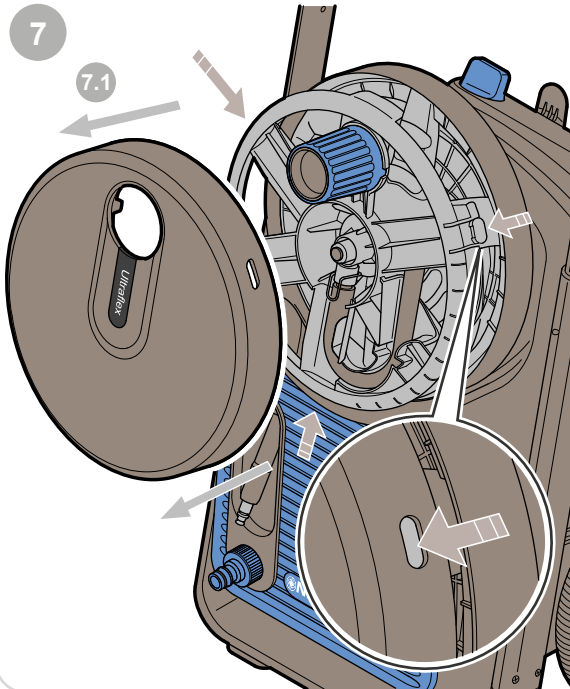 

7.2

